

MOTOROLA GDR4800

(351MHz Band / High Power 5W / 30 Channels)



【Troubleshooting】

No Power

Make sure that the Li-Ion battery is charged.
Make sure that the Li-Ion battery is set at the right position.

Message not transmitted

Verify Channel is same as others.
Verify the LED indicator is illuminated in RED while speaking.
Replace microphone.

Message not received


Verify Channel is same as others.
Verify the LED indicator is illuminated in GREEN while listening.
Replace earphone.



【 How to replace accessories】

Microphone


Turn screw counterclockwise to loose by screwdriver or coin.

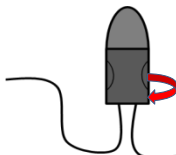

Earphone

Twist the plug to unplug. It is sometimes plugged tightly.

Bottom View

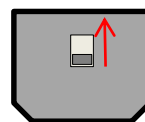

Li-ion Battery

Push down the battery latch and hold it depressed while removing the battery.