

ICOM IP Radio IP501H



Channel Select

1. When the keypad is locked, press lock button and hold to unlock.
2. Select the channel pressing or
You cannot switch the channel when ONLY ONE CHANNEL is set up.
3. Lock the keypad if necessary : press locked button and hold.



PTT button on the microphone is fastened with a tape, to prevent locked, **because transmission is held forever when the PTT button is locked. Please do not remove the tape.**

Troubleshooting

No Power

Make sure that the Li-Ion battery is charged.
Make sure that the Li-Ion battery is set at the right position.

Message not transmitted


Verify Channel is same as others.
Verify the LED indicator is illuminated in RED while speaking.
Replace microphone.

Message not received


Verify Channel is same as others.
Verify the LED indicator is illuminated in GREEN while listening.
Replace earphone.




How to replace accessories

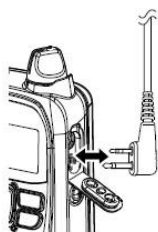

Microphone
Insert the plug into the accessory connector.

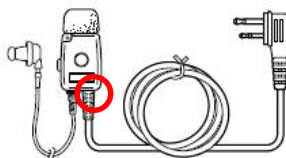

 Earphone
Insert the earphone plug firmly into the jack on the microphone side.



Li-ion Battery.

Li-ion Battery.